


# Mobile Hydrant Standpipe Meter Reading Instructions

Metering Services, Operations


## Standpipe Meter Reading - (Large 40 MM)

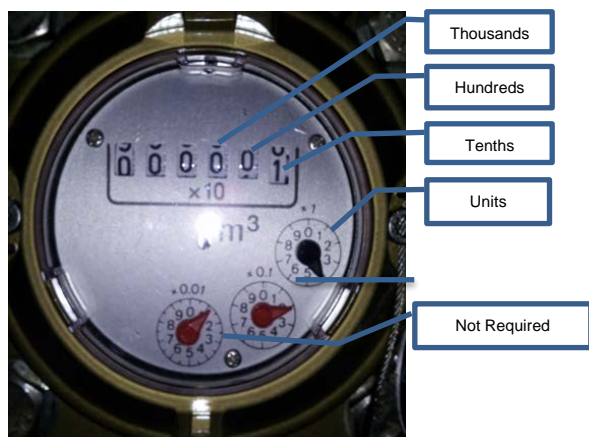

### Meter Reading Instructions:

- The main display number will be required to be multiplied by 10 (x10).
- The last digit for the meter reading will be taken from the units dial.
- This meter currently reads 14kLs (14000 Litres).
- Each meter reading requires a photograph of the dial.
- Please ensure that the photo is legible and includes the asset ID tag and/or engraving.

## Standpipe Meter Reading - (Small 25 MM)

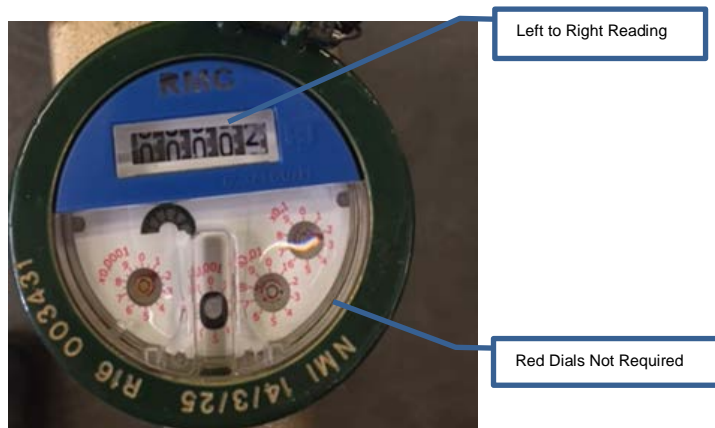

### Meter Reading Instructions:

- The black numbers with white background are read left to right.
- This meter is reading 2 Kilolitres.
- Please ensure that the photo is legible and includes the asset ID tag and/or engraving.

The meter reading is required to be sent to [standpipe@watercorporation.com.au](mailto:standpipe@watercorporation.com.au) including a photo attachment. Meter readings must be supplied between the 1<sup>st</sup> and 15<sup>th</sup> of every month, your cooperation is appreciated.

For queries please contact 13 13 95 or visit [watercorporation.com.au](http://watercorporation.com.au)