

WHS-WI-010-51 WORK INSTRUCTION

Approved by:	Technical Service Manager
Version:	1
Effective Date:	26/02/2020

This Work Instruction outlines the steps required to maintain a Bucket/Silt Trap, for optimal use.


Department: Technical Services / R&D

Task/Activity Product – Bucket/Silt Trap Maintenance

Task Instructions: The cleaning requirements of the Bucket/Silt Trap are governed by the frequency of use and the type of trade waste discharged into the bucket/silt trap.

1. Review the diagram of the Bucket/Silt Trap and components. Stainless steel lid Filter bucket Bucket/Silt trap body


2. Buck trap

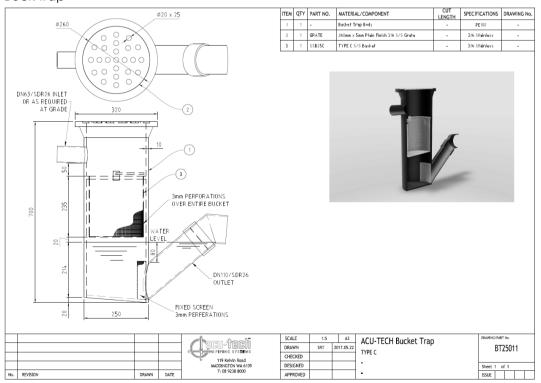




WHS-WI-010-51 WORK INSTRUCTION

Approved by:	Technical Service Manager
Version:	1
Effective Date:	26/02/2020

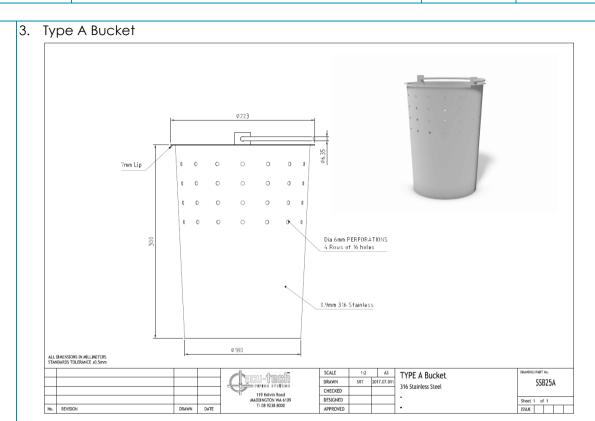

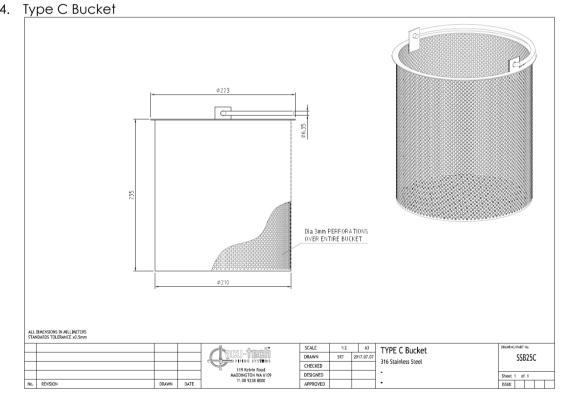



WHS-WI-010-51 WORK INSTRUCTION

Approved by:	Technical Service Manager
Version:	1
Effective Date:	26/02/2020

ITEM 2	TASK/ACTION: Maintenance of Bucket/Silt Trap
	 To clean, remove the stainless steel lid and lift the filter bucket out. Empty the solids from the bucket into an appropriate waste bin.
	2. Remove any additional solids found inside the silt trap body that may have bypassed the filter bucket.
	3. Using high pressure water and a stiff plastic bristle brush scrub the fixed filter at the bottom of the silt trap. (A toilet brush works well). Rinse well removing any attached residue material.
	4. Repeat step 3 on the filter bucket. Removing all residue material.
	5. Wash down the entire internal area of the silt trap with clean water.
	6. Replace filter bucket and stainless steel lid.

-- End of Work Instruction --