

## Bucket/Silt Trap Maintenance.

The cleaning requirements are governed by the frequency of use and the type of trade waste discharged into the bucket/silt trap.

1. To clean, remove the stainless steel lid and lift the filter bucket out. Empty the solids from the bucket into an appropriate waste bin.
2. Remove any additional solids found inside the silt trap body that may have bypassed the filter bucket.
3. Using high pressure water and a stiff plastic bristle brush scrub the fixed filter at the bottom of the silt trap. (A toilet brush works well) Rinse well removing any attached residue material.
4. Repeat step 3 on the filter bucket. Removing all residue material.
5. Wash down the entire internal area of the silt trap with clean water.
6. Replace filter bucket and stainless steel lid.



119 Kelvin Rd Maddington WA 6109  
T: 08 9238 8000